


Verge Overhang - Soffit installed after panel

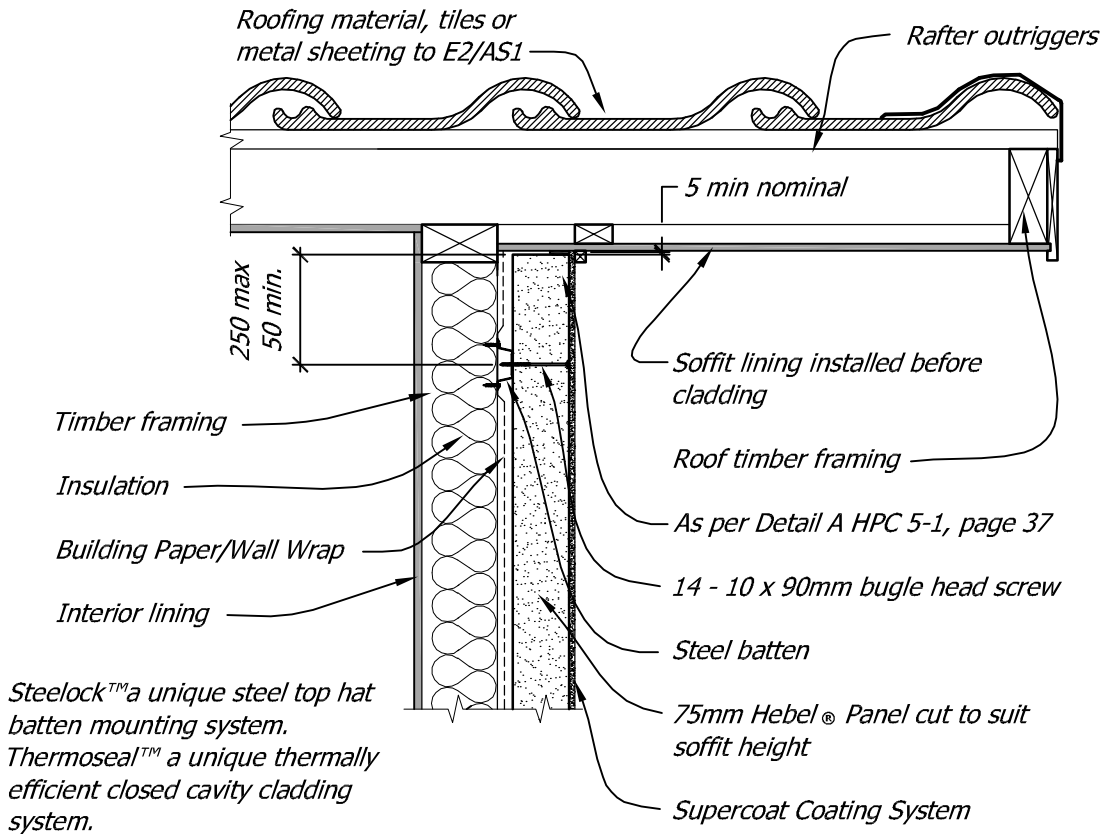

Verge Overhang - Soffit installed before panel

Hebel
Supercrete

Title:

Verge Overhangs

Date. September 2011

Scale: 1:10

Detail No. **HPC 5-12**

This drawing must be read in conjunction with the Hebel Supercrete 75mm Panel Cladding Design Guide Part 1